

"Takibi Axe" 115mm

with leather case

User's Guide

Sold by Babachokanamono Co.,Ltd.

Thank you for purchasing our product.

This product is an axe for chopping firewood.

This axe blade is a double-edged style with an integrated structure from the blade to the handle.

It can be used by tapping the axe like batoning, even beginners can enjoy chopping firewood easily.

Please read this manual carefully before use to ensure proper and safety use.

Meaning of the sign in the manual.


Fear of increased damage.

Prohibited activity.

Notes must be read.



Name of each part

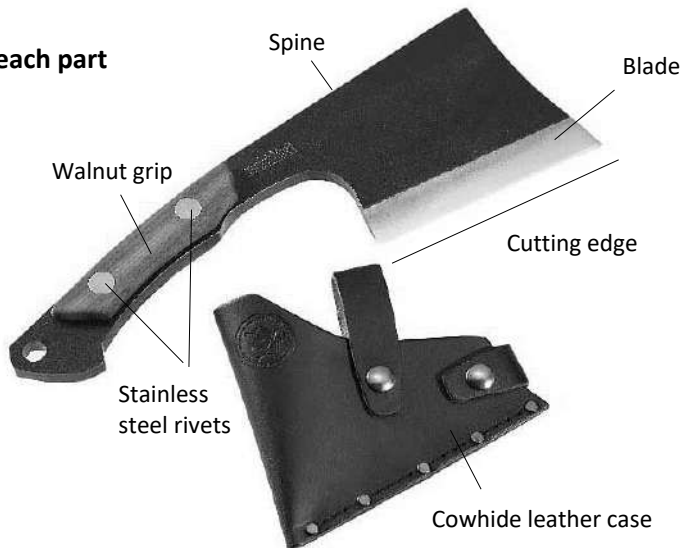

Before use (Please read closely for safety)



Caution

Please follow these instructions to prevent injury and damage.

- Do not drop or give a strong shock. It may damage the product.
- Do not use for any purpose other than in this instruction manual.
- Do not use the product as a hammer.
- Do not use if you feel something is wrong with it.
- Do not touch the cutting edge directly with bare hands.
- Do not use as a plaything for children.
- Do not use for cutting metal.
- Never strike with a metal hammer or similar hard one.
- Keep the product away from fire.
- Do not strike the wooden grips.

How to Use

<Preparation before use >

- Please check if the handle doesn't rattling and looseness, nick a blade, and scratches on the leather case.
- Wear gloves to protect your hands.

<Batonig >

- When chopping wood, be sure to build a foundation.
- Let the cutting edge of the axe lightly bite into the firewood.
- Hold the axe in your dominant hand and grab the wood with the opposite hand and tap it against the base.
- Think firewood should be several times, not in a single chopping.
- Strike the tip side from the center of blade.



Do not pry forcibly, when chopping firewood. It may damage the blade.
Notice any abnormalities such as handle rattling, stop using the knife and contact a dealer or the distributor.

One more twist.

This axe is double-edged style and, so it can be used with either the left or right dominant hand.

How to Care

When caring for the products, please follow the instructions below.

- After use, wipe off any dirt with a dry cloth.
- For stubborn stains, use a brush and rinse thoroughly with water.
- Wipe off moisture with a dry cloth.
- When dried, apply blade oil to the entire Hatchet.
- Sharpen the cutting edge when the sharpness becomes poor.
- The grip part will also deteriorate, please apply a coat of "Beeswax" to the grip.
- Store it in a leather case.

For good care

Apply blade oil not only to the blade but also to the handle.
It will prevent rust from forming.

Contact info

We are welcome your email inquiries.

Babachokanamono Co., Ltd. **E-mail: info@babachokanamono.co.jp**

Specification

over-all length : approx. 280mm(11.02inch)
Size: Blade length: approx. 115mm(4.52inch)
Blade thickness: approx. 9mm(0.35inch)
Materials : Carbon steel blade, Walnut handle,
Stainless steel rivets, Cowhide leather (case)
Weight: approx. 925g(32.63oz)
Blade form: double-edged
Accessories: with leather case

Sold by

Babachokanamono Co., Ltd.
2-7-5 Kitashinbo, Sanjo, Niigata 955-0861
TEL: +81-(0)256-32-2251
FAX: +81-(0)256-32-2253
E-mail: info@babachokanamono.co.jp
<http://www.babachokanamono.co.jp/>

